

140.00 mm

210.00 mm

# User Manual

DT24 Video Baby Monitor

**IMPORTANT SAFETY INSTRUCTIONS**

- Read instructions carefully before first use and pay close attention to all warnings. Follow all instructions carefully for safe and successful use. Do not use near water and clean with dry cloth only.
- Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produces heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exist from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus or the apparatus has been exposed to rain or moisture.

**Warning**


- STRANGULATION HAZARD**—Keep cord out of child's reach. NEVER place camera or cords within 3 feet of crib or playpen. Never use extension cords with AC Adapters. Only use the AC Adapter provided.
- Some adult assembly or installation required.
- This product contains small parts that may cause choking. Keep small parts away from children.
- This product is NOT intended to replace proper supervision of children. You must check your child's activity, as this product will not alert parents to silent activities of a child.
- Before using this product, read and follow all instructions contained in this booklet. Read and follow all instructions and warnings on the product.
- NEVER use the transmitter or monitor near water, including near a bathtub, sink, laundry tub, wet basement, etc. This product is intended for indoor use only.
- This product is not intended for use as a medical monitor and its use should not replace adult supervision.
- The transmitter detects normal sound levels within a range of 2 to 3 meters (6 to 10 feet) from a child. If the child moves outside of this range it may not be able to detect sounds from him or her.
- It is essential that you check the operating range and condition of the transmitter monitor on initial installation, and on a regular basis after that.
- Check reception regularly. Test monitor before use and after changing camera location.

**The wireless signal transfer range may be shortened if an obstacle such as a concrete wall is in between camera and monitor.**


- To prevent overheating, keep the product and AC power adapter away from any direct sunlight and heat sources such as radiators, heat registers, cooking devices(e.g. stoves and ovens)and other appliances that produce heat (e.g. amplifier, television and stereos)
- Ensure that the product is well ventilated during use. Avoid contact with pillows and furniture that may block ventilation.
- Use only the AC adapter provided with the product, as other adapters may damage the product.
- Plug the adapter only into standard household current(10~240 volts AC)
- Place the AC adapter avoiding pinch point or you may cause damage to the adapters.
- When an AC adapter is plugged into a power source DO NOT touch the exposed end of the AC adapter's cord.
- Do not use extension cords with the AC power adapters to avoid entanglement.
- This product should only be serviced by qualified and authorized service centers
- Be cautious when using the system to watch a young child. Do not place the camera where the child can reach
- When using the system with only battery power and the charge is low, the picture and/or sound may affected.
- If this occurs then please connect the AC power adapter.

**WHAT'S INCLUDED**


**Package contents**




Wireless monitor



Wireless camera




Monitor adapter




Camera adapter

**OVERVIEW**


**Wireless Camera****Front Controls**

Lens  
IR LEDs  
MIC  
Night light  
Temperature detection

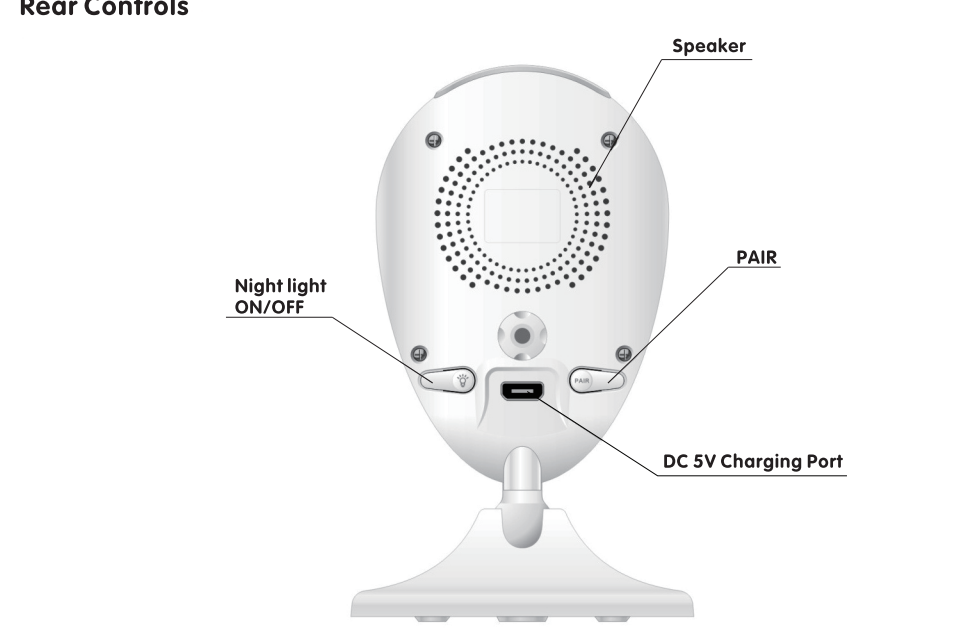
**Rear Controls**

Speaker  
PAIR  
DC 5V Charging Port  
Night light ON/OFF


**OVERVIEW**

**Wireless Monitor****Front Controls**

2.4" LCD Screen  
Sound indicator  
ON/OFF MENU  
TALK Button  
MIC  
Zoom  
Night Light

**Rear Controls**

Speaker  
Clip  
Bracket

**Viewing Mode Display**

PAIR  
Brightness  
Lullabies  
Temperature unit

Press **1** to power on the night light!

**Setup steps**

- Press **1** key then press **2** to choose options
- Press **OK** to enter the options to start setting
- Press **2** to choose, press **OK** to confirm the settings
- Press **1** key to exit


**Intercom**

- Press monitor intercom button **1** to talk to the camera
- Loosen the intercom button **1** to hear sound from the camera

**PAIR**

- Press **1** then press **2** to choose this option
- Press **OK** to enter the pairing option
- Meanwhile press the pair button behind the camera for 3S, video will appear on camera

Note: products have already been paired before delivery

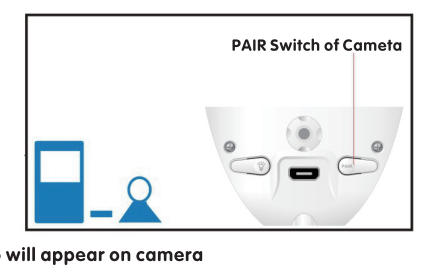

**Installation**

**How to install**

CAUTION: If using the system to monitor a young child, place the camera out of reach of children!

**Wireless Monitor**

- Place the monitor in a place that will have clear reception with your camera(s)
- Adjust the stand

**Wireless Camera**

Before you install the camera, carefully plan where and how it will be positioned, and where you will route the cable that connects the camera to the power adapter.

Before starting permanent installation, verify its performance by observing the image on the monitor when camera is positioned in the same location/position where it will be permanently installed and the monitor is placed in the location where it will be used most of the time.

**Installation Warnings**

Aim the camera(s) to best optimize the viewing area: Select a location for the camera that provides a clear view of the area you want to monitor, which is free from dust, and is not in line-of-sight to strong light sources or direct sunlight.

Avoid installing the camera where there are thick walls or obstructions between the camera and the monitor.

**STRANGULATION HAZARD**—Keep cord out of child's reach. NEVER place camera or cords within 3 feet of crib or playpen. Never use extension cords with AC Adapters.

Only use the AC Adapters provided.

- carefully unpack the camera.
- If you are installing cameras that did not come with the system, please see the pairing camera section of this manual for details on installation.
- Mount the camera to wall
- Adjust the viewing angle of camera

**Specifications**

System General	
Operating frequency range	2400MHz~2483.5MHz
Transmitting power	17dBm Max
Monitor sensitivity	-88dBm
Type of spread spectrum TX	FHSS
Type of modulation	GFSK
Data Rate	3Mbps
Transmission range	Outdoor 300m(eye of sight)
Operating temperature range	32°F~104°F
Operating humidity range	85%RH
Environment rating	Indoor use only

**Trouble Shooting**

Wireless Monitor	
No picture from camera	<ol style="list-style-type: none"><li>Check all connections to the camera. Make sure the adapter is plugged in</li><li>Make sure that the camera and monitor are both ON</li><li>Make sure that the camera is in range of the monitor</li><li>Make sure the camera and monitor are paired</li></ol>
The picture is/has become blurry /unclear	<p>The picture may become unclear when experiencing a lower frame rate (i.e. 10 frames per second vs. A higher 20 framesper second)</p> <ol style="list-style-type: none"><li>Try moving the camera closer to the monitor</li><li>Remove obstructions between the monitor and camera</li></ol>
No sound(even with both units turned on)	<ol style="list-style-type: none"><li>Make sure that the power adapter is connected to the camera</li><li>The battery on the monitor may be dead, be sure to charge it using the adapter included</li><li>The monitor may be out of range of the camera</li></ol>
Emitting a high pitched noise /feedback	This sound is normal feedback which occurs if the monitor and camera are too close together. Move them further apart.

**Contact Us**

For any inquiries, issues or comments concerning our products, please send E-mail to the address below or call us. We will respond as soon as possible.

E-mail: [cs@babylegpress.com](mailto:cs@babylegpress.com)  
US customer service line: (301)970-7335

正

反