

# USER MANUAL

— D1 Car Dash Camera —

Please read this manual before operating your car dash camera,  
and keep it for further reference.

**DRAGON**TOUCH<sup>®</sup>

## CONTENTS

---

What's in The Box	1
Camera Overview	2
Buttons Introduction	3
Charging the Battery	4
Recording mode settings	5
System Settings	6
Specifications	7
Precautions	7
Troubleshooting	7
Contact US	8

## WHAT'S IN THE BOX?



D1 Dash Camera



USB Cable



Suction Cup



Car Charger Adapter

 


Hardwire Kit +  
Five Cable Clips



Quick Reference Guide



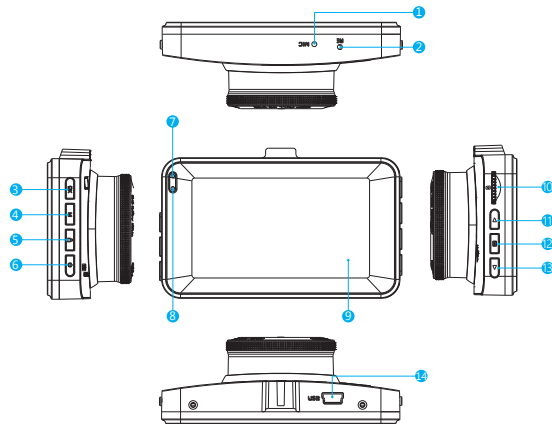



## CAMERA OVERVIEW



 
- |                       |                              |
|-----------------------|------------------------------|
| 1. MIC                | 2. RE                        |
| 3. Video / OK         | 4. Mode                      |
| 5. Emergency Save     | 6. Power                     |
| 7. Charging Indicator | 8. Recording Indicator       |
| 9. Display            | 10. TF Card Slot             |
| 11. UP                | 12. Menu                     |
| 13. Down              | 14. DC Power / USB Interface |

## BUTTONS INTRODUCTION

Upon turning on the camera, press the "OK" button to stop recording.

1. Menu : Enter and exist menu.
  - Press the button one time to enter to recording mode settings.
  - Press twice times to enter to system settings.
  - Press third times to back to the main interface.
2. UP : Choose the option above.
3. Down : Choose the option below.
  - Press the button to turn on / off the MIC.
4. OK: Confirm the option
  - When in system settings, press it confirm the option.
  - When in recording mode, press it to start or stop recording.
5. Mode "M" : Playback
  - Press the button one time to enter to playback.
  - Press twice times to back to the main interface.
6. Lock : Lock the video manually.
7. Power : Short press it to turn on / off the screen, long press it to turn on / off the camera.

## CHARGING THE BATTERY

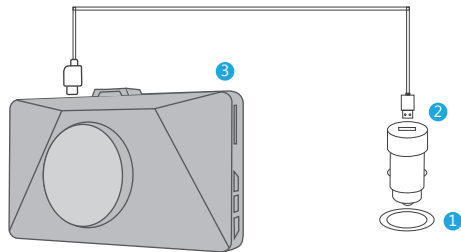


 
 
- ① Insert the USB car charger into your car's cigarette lighter socket.
- ② Insert the USB end of the USB power cord into the USB car charger.
- ③ Insert the Micro USB into the dash cam USB port  
(Charger Specification: In: DC 12-24V, Out: DC 5V 2A)

### PLEASE NOTE:

1. The battery takes about two hours to be charged fully.
2. When the battery is charging, the indicator light on the top left of the screen will be stayed red; When it charged fully, the light goes off.
3. To avoid damage to the device, please do not charge the battery via the USB data cable with other adapters.

## RECORDING MODE SETTINGS

---

Press the menu button  one time to enter to this mode, and press  or  to choose the option.

### 1. Resolution - 1080FHD / 720P / VGA three optional

- Default setting is 1080FHD.

### 2. Loop Recording - off / 1 minute / 3 minutes / 5 minutes four optional

- Default setting is 3 minutes.

- The files will be saved every 3 minutes if you choose 3 minutes. When the memory card is full, the new files will cover the old one if the loop recording is on, if it is off, then the camera won't work any more, please format the SD card or change a new one.

### 3. WDR (Wide Dynamic Range)

- Default is on.
- Balance light and darkness in driving to get the best image automatically.

### 4. Audio Recording

- Default is on.
- Allows you to enable or disable audio recording with your videos.

### 5. Date Stamp

- Default is on.
- Stamp the date and time to the videos.

### 6. G-sensor - off / low / medium / high four optional

- Default is off
- Gravity Sensor means any collision will activate the camera to record, and the videos will be locked which will never be covered by new files.
- The video is stored as a file every three minutes. When driving, if the road is bumpy, please adjust it to low or turn off it directly to prevent the camera doesn't work because of the memory card is full. When parking, recommend you to adjust it to medium.

## 7. Parking Monitor (default is off)

- Default is off
- When there is no power input and the camera has been turned off, the camera will be turned on automatically and start recording, the video will be saved and the camera automatic shutdown after 30 seconds

## SYSTEM SETTINGS

---

### 1. Frequency - 50HZ / 60HZ two optional

- Default is 60HZ




 
### 2. Beep Sound

- Turn on or off the button sound

### 3. Language

- Choose camera's language

### 4. Data / Time Setting

- Press  button twice to enter to setting interface, choose Data / time.
- Press  and  to adjust the data and time, press "OK" to confirm the each option, press  to end the setting.

### 5. Format

- Every time you insert a SD card, please format it in the camera to ensure that the SD card is compatible with the camera.

### 6. Default settings

- Restore the original settings

### 7. Version

- Check the camera's version

## SPECIFICATIONS

Name	Dragon Touch Dash Cam	Model	D1
Size	88.5mm x 56mm	Lens Angle	170°
Net Weight	60g	Working Temperature	14 ℱ - 140 ℱ
Screen	3 inch HD LCD display	Battery	180mAh
Micro SD Card	16GB-32GB (not in package)	Max Video Resolution	1080P

## PRECAUTIONS

1. Please safekeeping, prevent the lens from scratching and dirty.
2. Please pay attention to anti-fouling and moisture-proof.
3. Do not exposure the machine to the sun directly, prevent the built-in battery from damage.

## TROUBLESHOOTING

**Q:** Why the camera always say "no card inserted"?

- A:**
1. Please ensure that the memory card is class 10 and above.
  2. Format the memory card on computer firstly. When you format it on computer, please choose "FAT32(Default)" on File system, and choose "32 kilobytes" on Allocation unit size.
  3. Format it in the camera.

**Q:** The camera don't work any more.

- A:** Please check whether the memory is full, if yes, please save the files and format the SD card.

**Q:** The image is blurry.

- A:** The windshield will reflect the light, please adjust the camera.

**Q:** The camera lose power often.

- A:** Due to different vehicle designs, please rotate the car charger to adjust it keep stable.

**Q:** The camera unable to be turned on.

- A:** Please make sure that whether the charge indicator light is on or off, if off, please re-insert the car charger and reset the camera.

**Q:** All buttons are not responding.

- A:** Please reset the camera to restart.

**Q:** The camera doesn't record automatically after turning on.

- A:**
1. Check whether the memory card is full or no.
  2. Reformat the card, if this problem exists, please change a new card.

**Q:** The video has no voice.

- A:** Please confirm whether the recording indicator light is on. And in recording mode, short press ▼ will close to record the voice.

**Q:** Menu button  was no responding.

- A:** Because when the camera is recording, you can not operate the menu button, please press OK button to stop recording

**Q:** The camera keeps turning on and off automatically.

- A:** please charge the camera via USB car charger, do not charge the battery via the USB data cable with other adapters.

## Contact US

For any inquiries, issues or comments concerning our products, please send E-mail to the address below, and we will respond as soon as possible.

**E-mail:** [cs@tabletexpress.com](mailto:cs@tabletexpress.com)

**US customer service line:** (301)670-7335