

USER MANUAL

DT40 Baby Monitor



 

 
CONTENTS

Warning	1
Packing List	2
Overview	2
Getting Started	4
1. Charge the Camera	4
2. Camera Pairing	4
3. Volume Setting	5
4. Add Camera	6
5. Brightness Setting	7
6. Lullaby	8
7. Vox Setting	9
8. Feeding Timer	10
9. Time Setting	11
10. Temperature Setting	12
FQA	13
Contact US	13

WARNING


1. Strangulation Hazard - Children have strangled in cords. Keep this cord out of the reach of children (more than 3 feet (1m) away).
2. Never Place the Camera of Cord in or Near Crib or Playpen. Secure the cord at least three feet away from crib or playpen.
3. Caution - Only insert a battery pack, Never use the transmitter or receiver near water, including near a bathtub, sink, laundry tub, wet basement, etc.
4. Use only the AC adapters provided.
5. Adult assembly is required. Keep small parts away from children when assembling.
6. This product is not a toy. Do not allow children to play with it.
7. This product is not intended to replace proper adult supervision of children.
8. You must check your child's activity regularly, as this product will not alert parents to silent activities of a child.
9. Before using this product, read and follow all instructions and warnings contained in this booklet.
10. This product is intended for indoor use only.
11. This product is not intended for use as a medical monitor and its use should not replace adult supervision.
12. Test monitor before use and after changing camera location. Check reception regularly. Obstacles, such as concrete walls, may shorten the wireless signal transfer range.
13. Always unplug AC adapters from wall outlets and power sources during periods of non-use.
14. Do not touch the plug contacts with sharp or metal objects.
15. Do not allow water damage to the monitor unit, charging port, or charging cable which cause overheat of the charging components.
16. Do not use unofficial third party charging cables and adapters to charge the device. This may result in overheat of the charging port. Only use the charging cables and adapters provided in the box.

PACKING LIST

 DT40 Camera	 DT40 Monitor	 Camera Power Adapter
 Monitor Power Adapter	 Quick Reference Guide	

OVERVIEW


 
1. Baby Unit

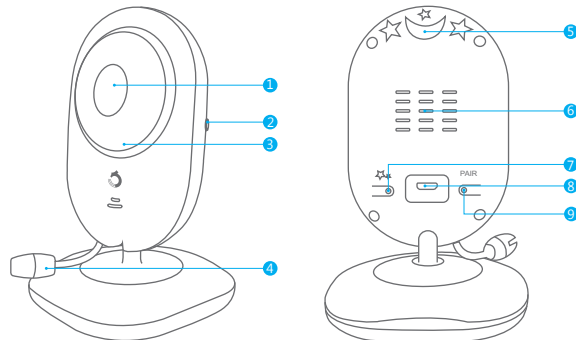


- | | | |
|-----------------|--------------------------|-----------------------|
| 1. Lens | 4. Temperature Detection | 7. Night Light Button |
| 2. Light Sensor | 5. Night Light | 8. DC 5V Power Input |
| 3. IR LEDs | 6. Speaker | 9. PAIR Button |

- | | | |
|---------------------------|----------------------|-----------------------------------|
| 1. Talk / Sleep Button | 6. Darken the screen | 10. Play the lullabies |
| 2. Menu / On / Off Button | 7. OK | 11. Turn on / off the night light |
| 3. Turn down the volume | 8. Screen | 12. Bracket |
| 4. Brighten the screen | 9. Microphone | 13. Speaker |
| 5. Turn up the volume | | |

  
2. Parent Unit

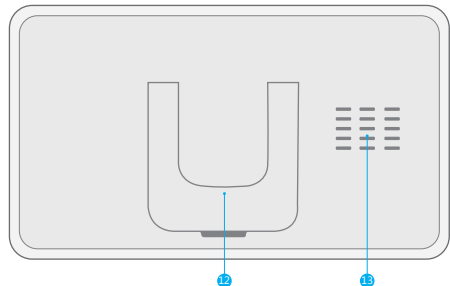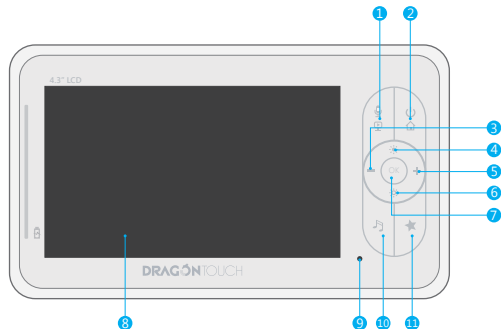


GETTING STARTED

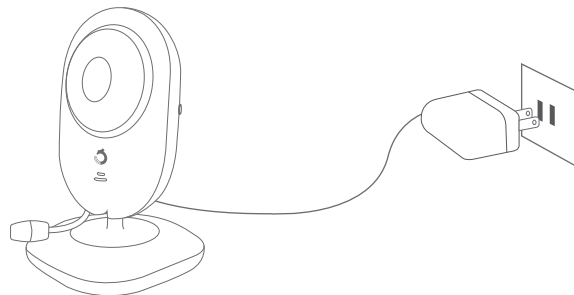 

1. Charge the Camera

- ① Connect the camera power adapter to the camera unit.
- ② Long Press  to turn on/off the camera.
- ③ Position your camera unit no less than 3 feet away from your baby's crib. Ensure the power cord is not within reach of your baby.

2. Camera Pairing

Press  then press "OK" button to enter camera option , the led indicator will be flashing. Meanwhile press the "PAIR" button behind the camera for 3s.

3. Volume Setting

① Press Menu button to enter to the interface choose .



② Press "OK" button to enter to the interface. Press + / - to adjust the volume.



4. Add Camera

① Press Menu button to enter to the interface choose .



② Press "OK" button to enter to the interface. Camera 1 is the default setting .Press + / - to add other cameras. Up to add 4 cameras .



5. Brightness Setting

① Press Menu button to enter to the interface choose .



② Press "OK" button to enter to the interface. Press + / - to adjust the screen's brightness.



6. Lullaby

① Press Menu button to enter to the interface choose .



② Press "OK" button to enter to the interface. Press + / - to chose the internal lullaby to Soothe your baby.



7. VOX Setting


① Press Menu button to enter to the function interface, choose .



② Press "OK" button to enter to the interface. Press + / - to chose the VOX level or turn off it.



8. Feeding Timer

① Press Menu button to enter to the function interface, choose .



② Press "OK" button to enter to the interface and choose the time to remind for feeding kids.



9. Time Setting

① Press Menu button to enter to the function interface, choose .



② Press "OK" button to enter the interface and set the time for VOX mode.



10. Temperature Setting

① Press Menu button to enter to the function interface, choose .



② Press "OK" button to enter the interface .Switch °C & °F easily by this function.



FQA

Q: Cannot to connect to camera.

A: 1. Please ensure the camera keep charging.

2. Please ensure the camera and monitor within 900 feet (at open area).

Q: The video changed to unclear.

A: 1. Please try to remove the camera near to monitor.

2. Please clear the obstacle between camera and monitor.

Q: The baby monitor has some noise.

A: The camera and tablet may be too close. Move them further apart.


Q: Can I use the 220V?

A: The working voltage of this baby monitor is 110-240V.

Q: How long this monitor can standby?

A: After charged full, the monitor can standby about 4 hours.

Q: Can I hear my baby's voice when turn off the screen?

A: Yes, please turn on the "VOX" function and press  to turn off the screen, then you will hear your baby's voice and alarm once any abnormal sound or noise happened.

Q: Picture is black and white?

A: Night vision mode operates in black and white. Turn on room light to force monitor out of night vision mode.

CONTACT US

For any inquires, issue or comments concerning our products, please send E-mail to the address below, and we will respond as soon as possible.

E-mail: cs@tabletextpress.com