
USER MANUAL

Dragon Touch Talkiecam Kids Camera

V1.0

DRAGON TOUCH

CONTENTS

What's in the Box	1
Product Specifications	1
Product Features	2
Getting Started	4
Modes	5
Settings	6
FAQ	8
Contact Us	8

What's in the box



Pink TalkieCam × 1



Blue TalkieCam × 1



Lanyard × 2



USB Cable × 2



16GB microSD Card × 2



Quick Start Guide × 1

Product Specifications

Dimension: 4.9x2.6x1.0in (125x66.3x24.3mm)

Weight: 6.0oz (169.7g)

Display: 2" IPS, 320x240 resolution

Photo Resolution: 8MP/5MP/1.3MP

Video Resolution: FHD(1920x1080)/HD(1280x720)

Lens: Fixed focus, F2.8, 3.56mm focal length, 100° viewing angle

Communication Frequency: 462.5652MHz

Indicator Lights: Blue working light, Red charging light

Storage: 2MB internal memory; support an up to 32GB external microSD card


Battery Capacity: 900mAh

Battery Life: Approximately 50 minutes


Charging Input: Micro-USB

File formats: jpg (still images), avi (video)

Product Features

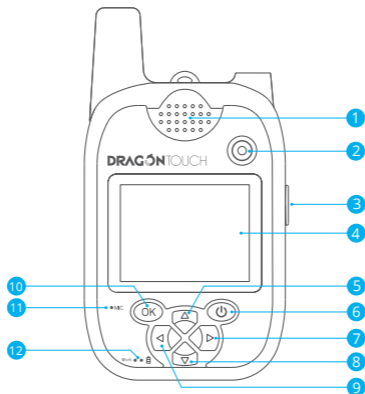

- | | |
|-----------------------|-----------------|
| 1 Speaker | 7 Right/Next |
| 2 Front Lens | 8 Down |
| 3 Push-to-talk Button | 9 Left/Previous |
| 4 Screen | 10 OK/Shutter |
| 5 Up/Light on Button | 11 Microphone |
| 6 Power/Exit | 12 Indicator |

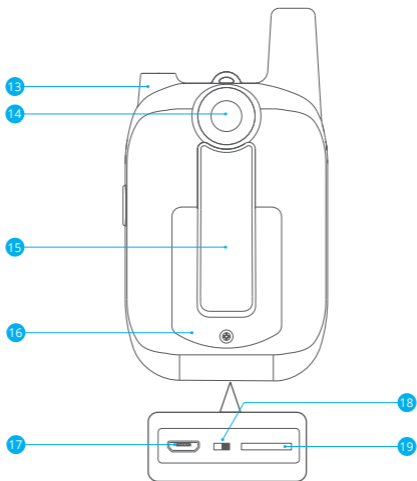

13 Flashlight

14 Rear Lens

15 Back Clip

16 Battery

17 Micro USB Port

18 Power Switch

19 MicroSD Card Slot



Photo/Video mode



MicroSD Card Status



Digital Zoom




Battery Status



Resolution

Getting Started


Charging and Power On/Off

Press and hold  for 3 seconds to power on/off the camera. Please charge it for at least 30 minutes if it doesn't power on. Charging in power off status is highly recommended.

Insert a microSD card

Please insert a microSD card into the card slot before taking photos or videos. Format the microSD card on the camera before using, then restart the camera after formatting.

Turn the Flashlight On/Off


Press and hold  to turn the flashlight on/off.



Auto Power Off



This camera will automatically turn the display off after 3 minutes of inactivity. To save energy, the camera will power off after 5 minutes of inactivity.

Modes

Photo Mode

Press  to take photos.


Press  or  to select different photo modes, photo frames, filters and special effects.

Press and hold  or  to zoom out/in.

Press  to exit.

Video Mode

Press  to start recording, and press it again to end recording.



Press  or  to select different filters.

Press  to exit.

Music Mode

Press     to select MP3 or Story, and press  to confirm.

While playing,

① Press  or  to switch songs or stories.

② Press  to pause/continue.

③ Press  or  button to adjust volume.

Press  to exit.

Tips:

- Please insert a microSD card to automatically build MP3 and Story folders.
- Please download music and stories to MP3 and Story folders respectively on your microSD card.

Playback Mode




Press  or  to view photos or videos saved in the camera.

Press  to play/pause the video.

Press and hold  to show the delete interface, then press  to confirm.

Press  to exit.

Game Mode

Press  or  to select the game you want to play, then press  to enter the game.

Press  to exit.

Walkie Talkie Mode

Note: The range is around 150m in an open area; 50m in the residential area.

To use the walkie talkie function, please make sure the Flight Mode has been turned off (Settings → Flight Mode → Off).

• Transmit

Press Push-to-talk (PTT) button to speak, release it to stop talking and to transmit. While talking and transmitting, the camera cannot receive messages.

• Receive

The camera will automatically receive messages if the Flight Mode is off and if the PTT button is not being pressed.

Settings

You can change and check following settings under this menu. Use the arrow and **OK** buttons to navigate the settings menu.

Format SD card

Press  to format the microSD card.

Please format the microSD card before using the camera. To prevent data stored on the microSD card from becoming corrupt, reformat it on a regular basis.

Reformatting erases all your content, so please make sure to download your photos and videos before reformatting.

Camera Version

You can check the system information of your camera under this setting.

Default Setting

This setting will reset the camera to the factory default settings.

Language Selection

English/Deutsch/Français/Italiano/Español/日本語

Airplane Mode

If the airplane mode is turned on, the walkie talkie function cannot be used.

Camera Resolution

8MP/5MP/1.3MP

Video Resolution

1080P/720P

Volume

You can adjust the key tone volume under this setting.

Date/Time

You can set the date and time under this setting.

FAQ

Why the walkie talkie mode doesn't work?

Please make sure the airplane mode has been turned off (Settings → Flight mode → Off). Also, the effective communication range is approximately 330-500 feet (100-150 meters) in an open space, and 150 feet (50 meters) in a residential area. Any obstacles (homes, trees, other structures) may interfere with the signal and decrease the effective communication range.

How can I upload MP3 and audio stories onto the camera?

When you insert the microSD card for the first time, it will create a directory named Music, with two subfolders named MP3 and Story. You can upload your music to the folders accordingly.

Contact Us

For any inquiries with Dragon Touch products, please feel free to contact us. We will respond within 24 hours.

E-mail: cs@dragontouch.com

Tel: 888-811-1140 (US) Mon-Fri (except holidays) 9am-5pm (EST)

Official website: www.dragontouch.com